




NK.990B

Ø 3/4"=19,05mm


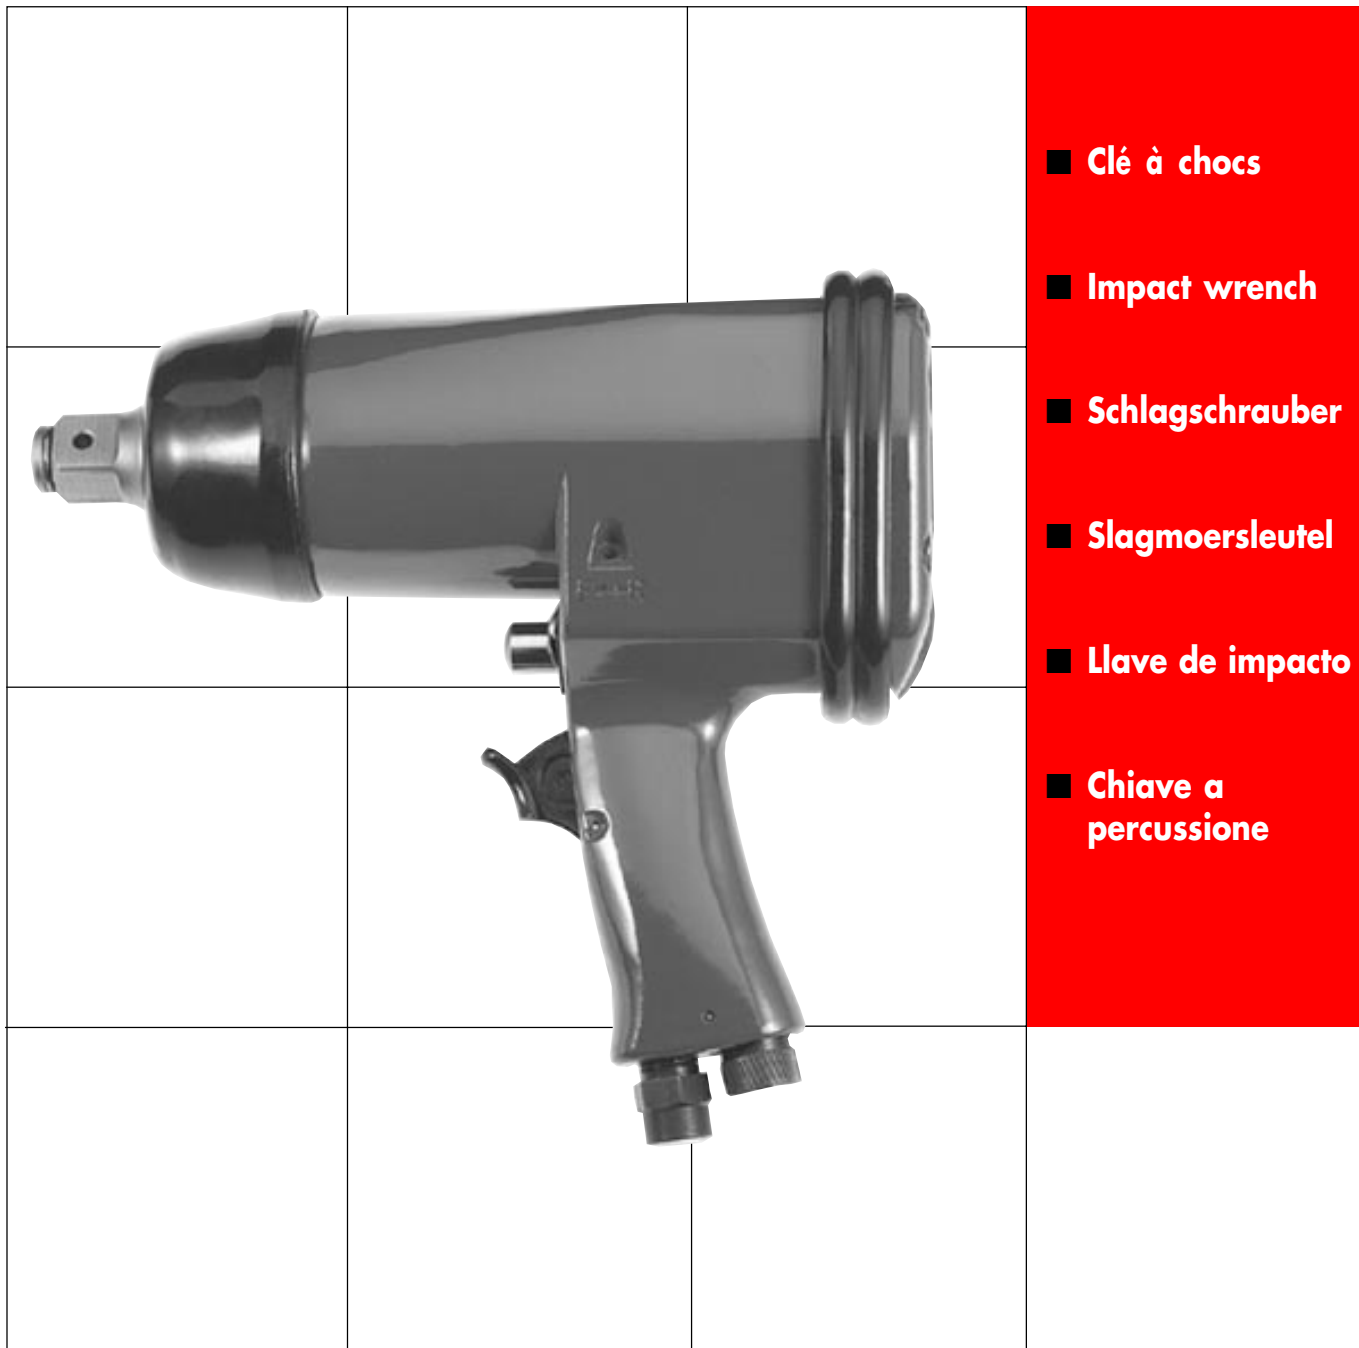


- Clé à chocs
- Impact wrench
- Schlagschrauber
- Slagmoersleutel
- Llave de impacto
- Chiave a percussione

Notice d'instructions
Instruction manual
Bedienungsanleitung
Gebruiksaanwijzing
Manual de instrucción
Istruzioni per l'utilizzo
NU-NK.990B/97

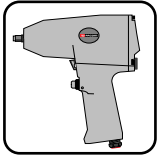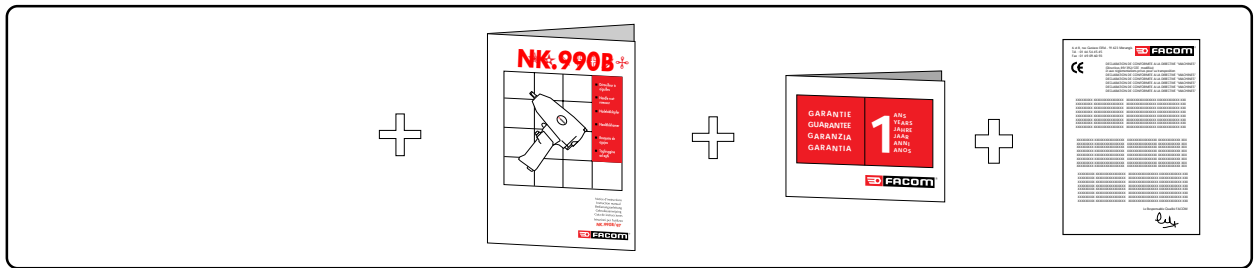

<p>19,05 mm 3/4"</p> <p>23 mm</p>	<p>5200 t/mn</p>	<p>450 Nm</p>	<p>96 dbA</p>
<p>6 bar → 500 l/mn</p>	<p>NK.240 NK.232 NK.230 NK.209--218 NK.17--46 NK.3/4--1"5/8 NK.17L--46L NK.3/4L--1"5/8L NKD.16--22 NKB.17--46</p>	<p>3/4"</p> <p>4,23 kg</p>	<p>4,38 m/s²</p>



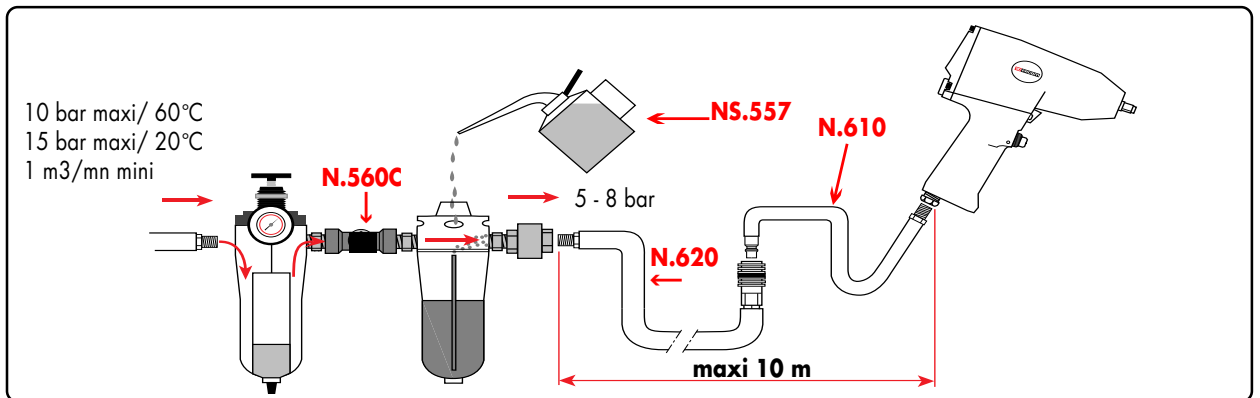
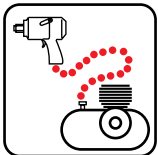


<p>BA.30 BA.34 BA.36 GA.32 GA.34 GA.36</p>	<p>MINI 450 Nm</p>	<p>Inverseur Reverser Umschalter Omkeerschakelaar Engranaje inversor Invertitore</p>	<p>0 450 Nm</p>	<p>Porter des lunettes de sécurité Wear eye protectors Schutzbrille tragen Een veiligheidsbril dragen Utilizar gafas de seguridad Portare gli occhiali di sicurezza</p>
--	---------------------------	--	------------------------------------	---



Pour garder la machine en bon état, remplacer les pièces d'usure toutes les 200 heures d'utilisation.
To keep the machine in proper working order, change wear parts after 200 hours to use.
Um die Maschine in gutem Zustand zu erhalten, Gebrauchsteile alle 200 Betriebsstunden austauschen.
Om deze machine in goede staat te houden, dienen de aan slijtage onderhevige onderdelen na 200 uren gebruik te worden verwisseld.
Para mantener la máquina en buen estado, cambiar las piezas de desgaste después de 200 horas de utilización.
Per mantenere la macchina in buono stato, cambiare le parti d'usura dopo 200 ore di funzionamento.


NK.990BRN1

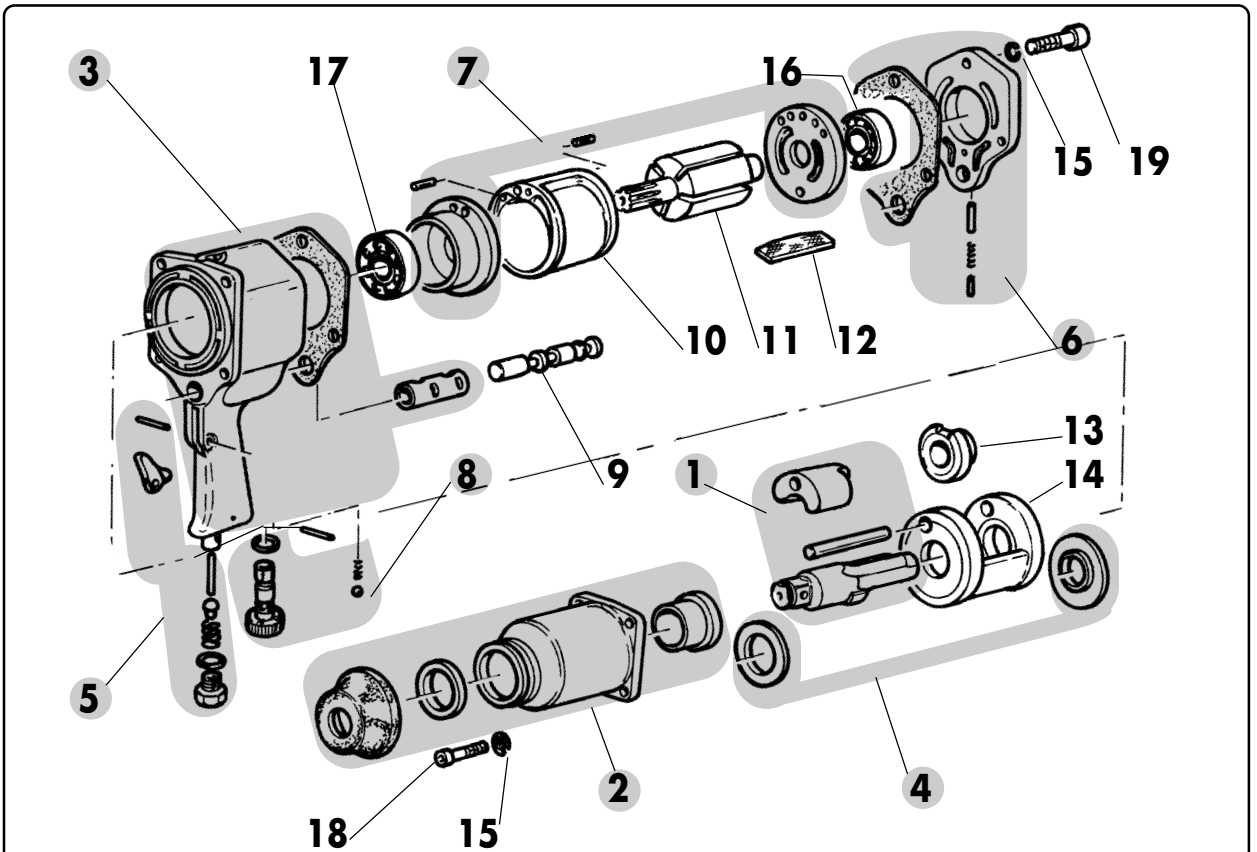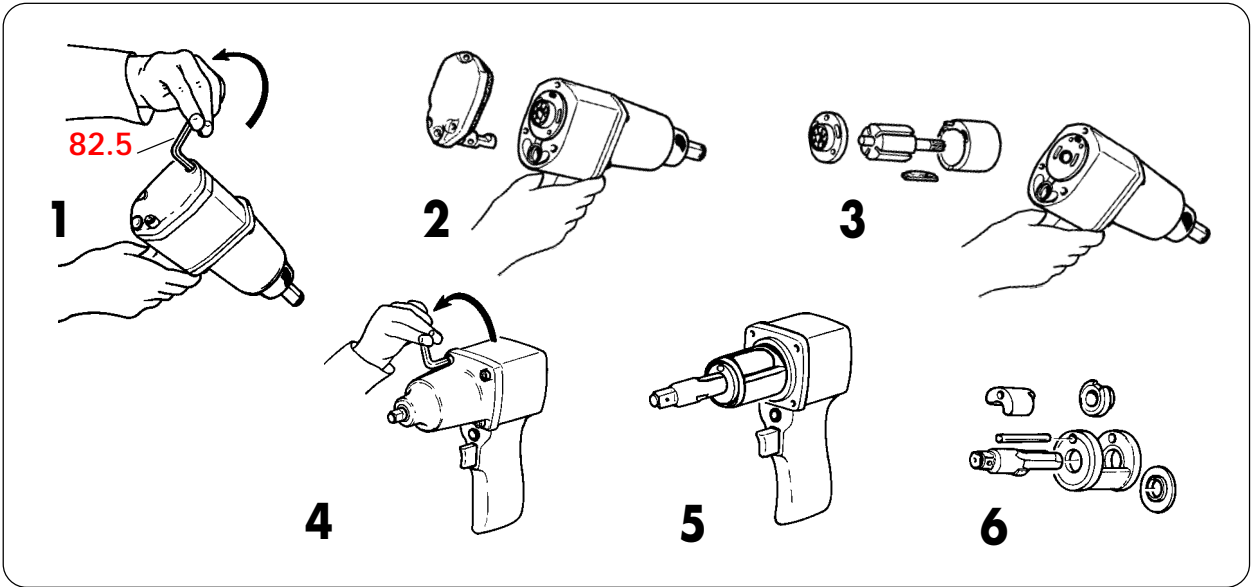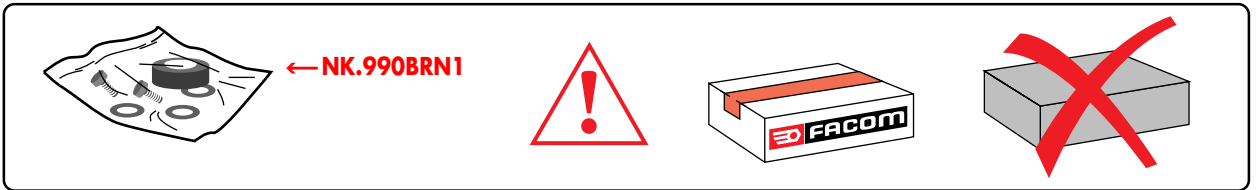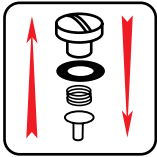

NK.990B		NK.990B	
1	NK.990BRN1	11	NK.990B044
2	NK.990BSE1	12	NK.990B046J5
3	NK.990BSE2	13	NK.990B054
4	NK.990BSE3	14	NK.990B055
5	NK.990BSE4	15	ROUD. WZ6
6	NK.990BSE5	16	ROULEMENT. 6202
7	NK.990BSE6	17	ROULEMENT. 6202Z
8	NK.990BSE7	18	VIS. CHC, M6-18
9	NK.990B027	19	VIS. CHC, M6-22
10	NK.990B041		

NS.1090L

□ 1/2" - 12,7 mm

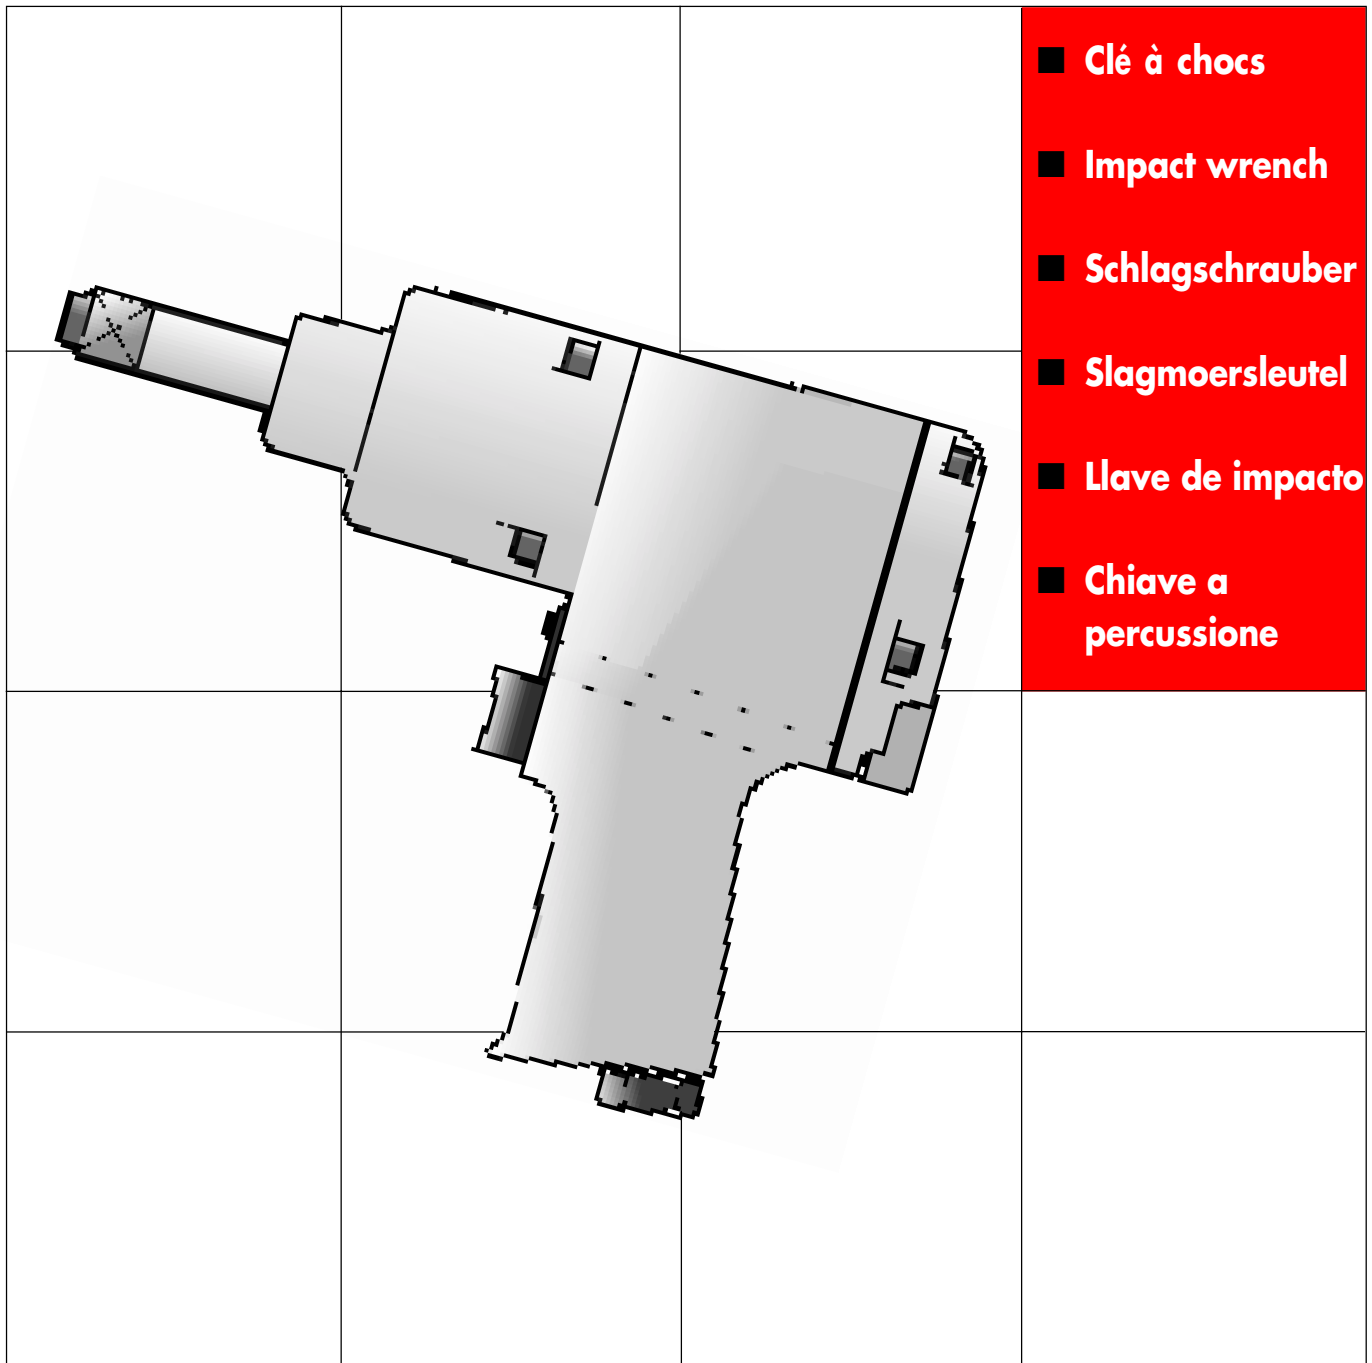

Notice d'instructions
Instruction manual
Bedienungsanleitung
Gebruiksaanwijzing
Manual de instrucción
Istruzioni per l'utilizzo
NU-NS.1090L/98



2,40 kg 230 x 190 x 80 mm

1/2" 20,5 mm 50 mm

maxi 8800 t/mn **maxi 300 Nm**

1/4 NPT ø 8 mm 600 l/mn

1/2"

NS.240
NS.232A (1/2" - 3/4")
NS.230 (1/2" - 3/8")
NS.236
NS.237
NS.6 -----32
NS.3/8 -----1"1/4
NSD.13 -----24
NSD.1/2 -----3/4
NS.8L -----32L
NS.210 / 215 / 218 / 219
NSB.8 -----32, (NSB.3)
NSH.3 -----19

86 dB(A)

1,96 m/s²



Inverseur
Reverser
Umschalter
Omkeerschakelaar
Engranaje inversor
Invertitore

400 Nm


100 300 Nm

NS.1090L

CE

GARANTEE
GARANTEE
GARANZIA
GARANZIA

1 ANNO
1 ANNO
1 ANNO
1 ANNO

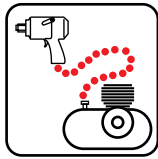

15 bars maxi/20°C
10 bars maxi/60°C
0,6 m³/mn mini

7 - 10 bars

NS.557

N.620 **N.610**

N.553

NS.1090L







MINI 300 Nm

Porter des lunettes de sécurité
Wear eye protectors
Schutzbrille tragen
Een veiligheidsbril dragen
Utilizar gafas de seguridad
Portare gli occhiali di sicurezza



Pour garder la machine en bon état, remplacer les pièces d'usure toutes les 200 heures d'utilisation.
To keep the machine in proper working order, change wear parts after 200 hours of use.
Um die Maschine in gutem Zustand zu erhalten, Gebrauchsteile alle 200 Betriebsstunden austauschen.
Om deze machine in goede staat te houden, dienen de aan slijtage onderhevige onderdelen na 200 uren gebruik te worden verwisseld.
Para mantener la máquina en buen estado, cambiar las piezas de desgaste después de 200 horas de utilización.
Per mantenere la macchina in buono stato, cambiare le parti d'usura dopo 200 ore di funzionamento.

NS.1090LRN

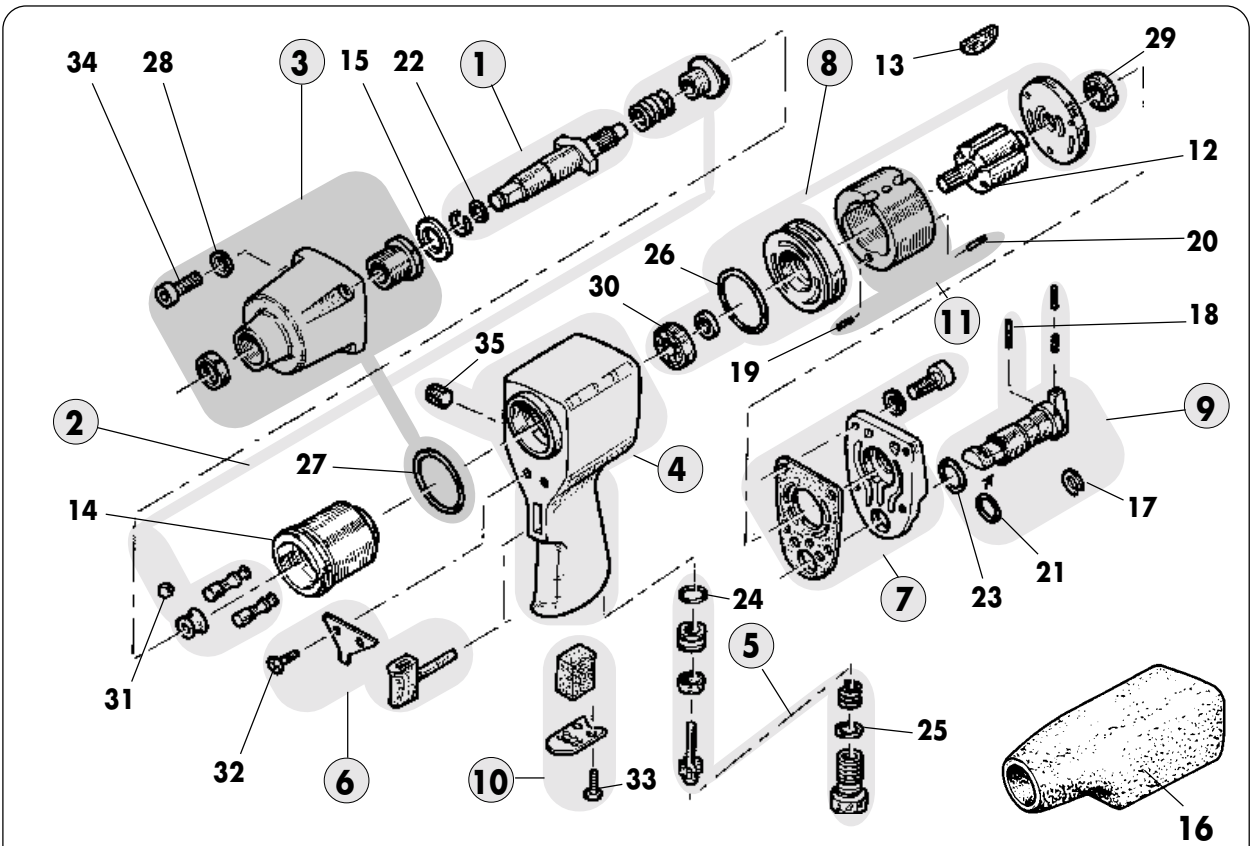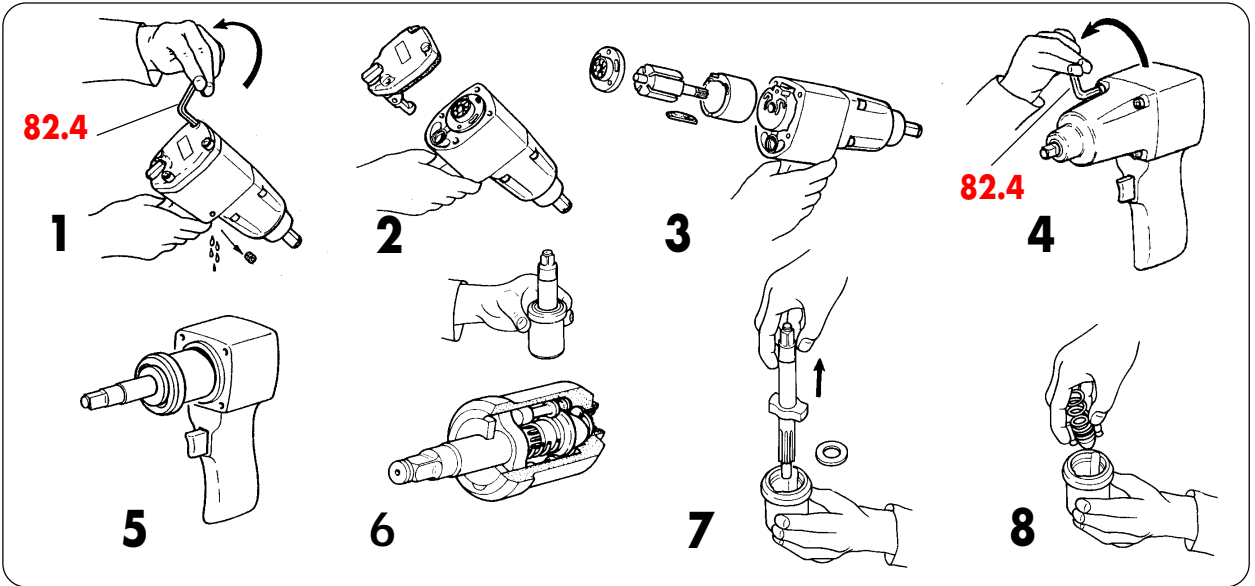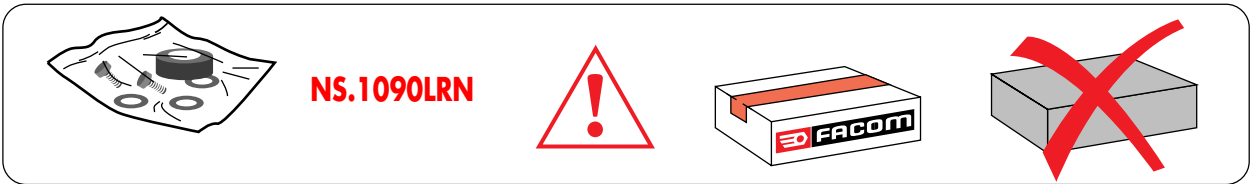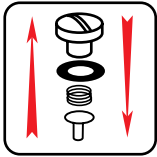

①	NS.1090LRN	⑬	NS.1090L046J6	⑳	BAGUE.R01600-240
②	NS.1090LSE1	⑭	NS.1090L055	㉑	BAGUE.R04850-200
③	NS.1090LSE2	⑮	NS.1090-064	㉒	BAGUE.R05100-200
④	NS.1090LSE3	⑯	NS.1090L074	㉓	ROULEMENT
⑤	NS.1090LSE4	⑰	ANNEAU.853016	㉔	ROULEMENT
⑥	NS.1090LSE5	⑱	GOUP.E,2,5-15	㉕	BILLE.RB-8
⑦	NS.1090LSE6	㉒	GOUP.E,4-10	㉖	VIS.CBPHI,M4-5 (2)
⑧	NS.1090LSE7	㉓	GOUP.E,4-20	㉗	VIS.RL,M4-10 (2)
⑨	NS.1090LSE8	㉔	BAGUE.R00600-200	㉘	VIS.CHC,M5-20 (8)
⑩	NS.1090LSE9	㉕	BAGUE.R00800-200	㉙	VIS.STHC,M8-6
⑪	NS.1090LSE10	㉖	BAGUE.R01250-200		
⑫	NS.1090L044	㉗	BAGUE.R01300-160		